

AM/FM Shower Radio

User Manual



-CONTROLS

- 1- AM band switch
- 2- Volume up switch
- 3- Power ON/OFF switch
- 4- FM band switch
- 5- Speaker
- 6- Tuning knob
- 7- Volume down switch
- 8- Suction caps
- 9- Hanger
- 10- Locking knob
- 11- Battery Compartment

-Operation

- 1- Unlock and open the battery compartment door
- 2- Insert 3x AAA batteries into the battery compartment
- 3- Press the ON/OFF switch to turn on/off the radio
- 4- Use the AM/FM band switch to select the AM/FM band.
- 5- Use the tuning knob to select the desired station
- 6- Use the volume + or - button to select the desired volume
(You can press and hold the volume button)



-Mounting the Radio

- 1- Install the included suctioncaps to the bottom of the radio
- 2- Make sure the mounting surface is clean and firmly place the radio on the surface.
- 3- To remove the radio, slightly tilt the unit and pull it off the surface.

Note : The RR65 is splash-water proof, it cannot be used under water!

-Batteries

- 1-When not using the radio for a prolonged period, remove the batteries to prevent battery leakage and damage to your radio.
- 2-Rechargeable batteries can be used, but will be depleted faster than regular batteries.

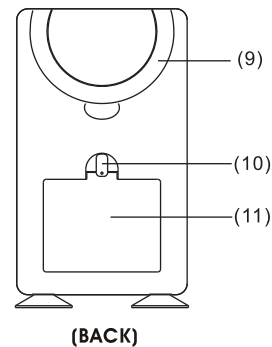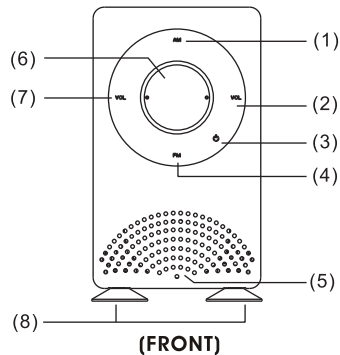

-Specifications:

Frequency range: AM : 530KHz > 1600KHz
FM : 88MHz > 108MHz

Power Supply : 3x AA batteries (DC 4.5V)



Size: 150 x 135mm